


TILT AND TURN HARDWARE

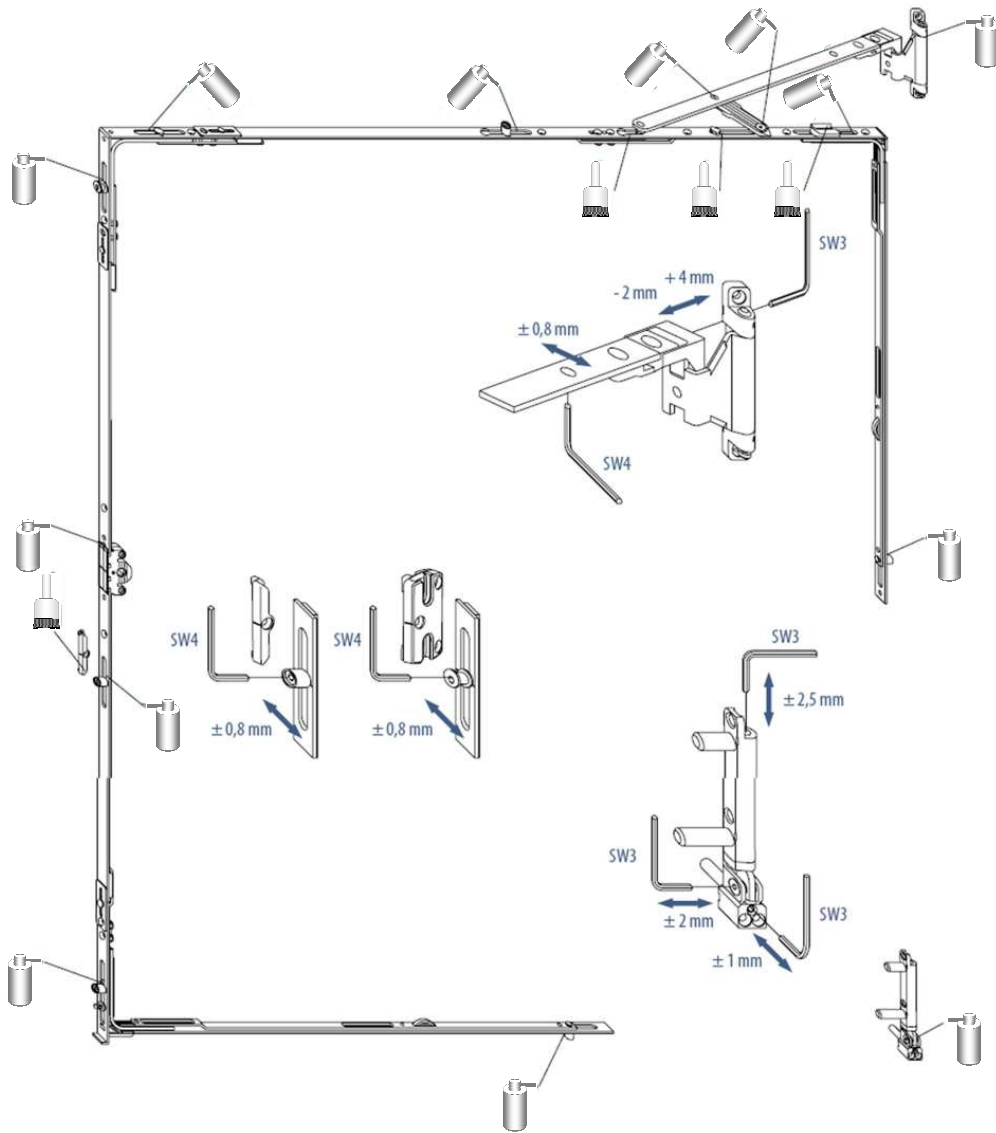


Light grease e.g. petroleum jelly



Light machine oil e.g. 3 in 1 oil.

CASEMENT HARDWARE

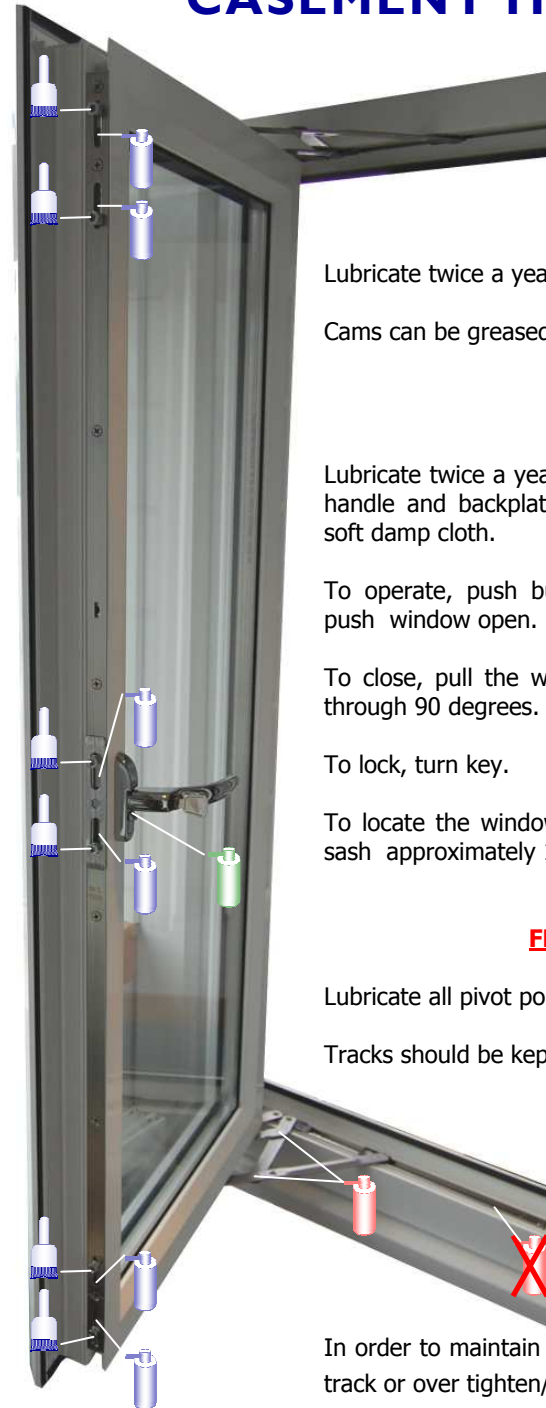

ESPAGNOLLETE

Lubricate twice a year with a light machine oil.

Cams can be greased with a light petroleum jelly.

HANDLES

Lubricate twice a year with a light machine oil between the handle and backplate. Handle should be cleaned with a soft damp cloth.

To operate, push button, rotate handle 90 degrees and push window open.

To close, pull the window closed and rotate handle back through 90 degrees.

To lock, turn key.

To locate the window in the night vent position open the sash approximately 15 mm and rotate the handle.

FRICTION HINGES

Lubricate all pivot points twice a year.


Tracks should be kept clear of dust and debris.

In order to maintain friction settings, DO NOT lubricate the track or over tighten/loosen the Friction Screw.

MULTIPOINT DOOR LOCKS



LOCKING THE DOOR FROM THE OUTSIDE

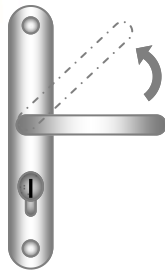


Close the door and lift the handle as far as it will go to engage the multi-point locking mechanism.

Return the handle to horizontal position and insert and turn key fully to lock the door.

Reverse the key half a turn to remove from the door which is now fully locked.

UNLOCKING THE DOOR FROM THE OUTSIDE

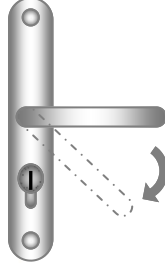


Place key in the lock and turn fully to unlock.

Press down on the handle to disengage the multi-point locking mechanism and return it to the horizontal position.

Turn the key to retract the latch and push or pull open.

LOCKING THE DOOR FROM THE INSIDE

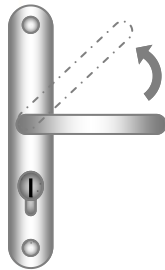


Close door and lift handle as far as it will go to engage multipoint locking mechanism.

Return handle to horizontal position insert key and turn fully to lock the door.

Reverse the key half a turn to remove from the door which is now fully locked.

UNLOCKING THE DOOR FROM THE INSIDE

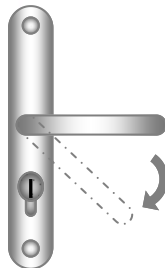

Place key in the lock and turn fully to unlock.

Press down the door handle to disengage the multi-point locking mechanism and the door will now open.

NESSGLAZE LTD

Units 1 - 4 Parkend Industrial Estate, Stornoway, Isle of Lewis, HS2 0AN

Tel: 01851 704973 / Fax: 01851 703003

Email: enquiries@nessglaze.co.uk / Web site: www.nessglaze.co.uk

MAINTENANCE INSTRUCTIONS FOR HARDWARE FITTINGS ON UPVC WINDOWS AND DOORS

Our products are specifically engineered to withstand the rigours of the Western Isles climate and offer unsurpassed structural strength and protection against high winds and driving ocean rain.

To prolong their lifespan they require occasional care and maintenance.

We recommend lightly lubricating the hardware twice a year. To maintain the good looks of the windows and doors, we suggest the PVCu frames are occasionally cleaned with warm soapy water.

Do not allow plaster, render, building dust or varnish to settle on any hardware, frames or glass. This may damage the product's finish and adversely affect the hardware's corrosion resistance properties.

Drainage slots should be kept clear and free from dirt.



AUTHORISED
PARTNER

